



**C-92563-CO-KIT  
KIT TO CONNECT C-2610-OS-W CROSSOVER  
ATTACHMENT TO C-92563-W POWER RACK**

**ASSEMBLY INSTRUCTIONS**

**DRAWING # 1**

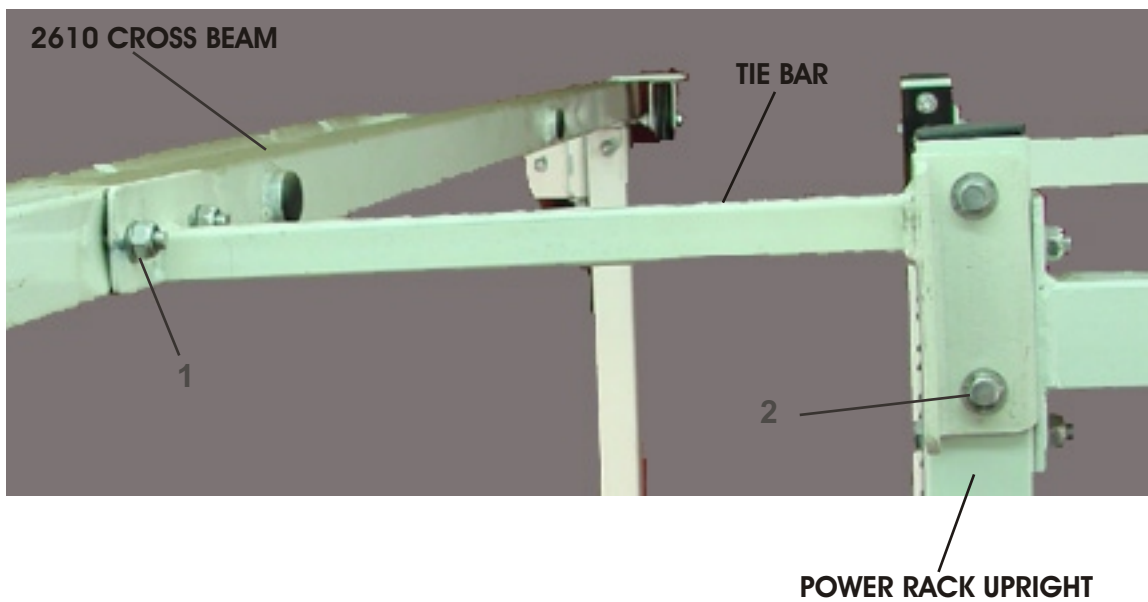

## DRAWING #2

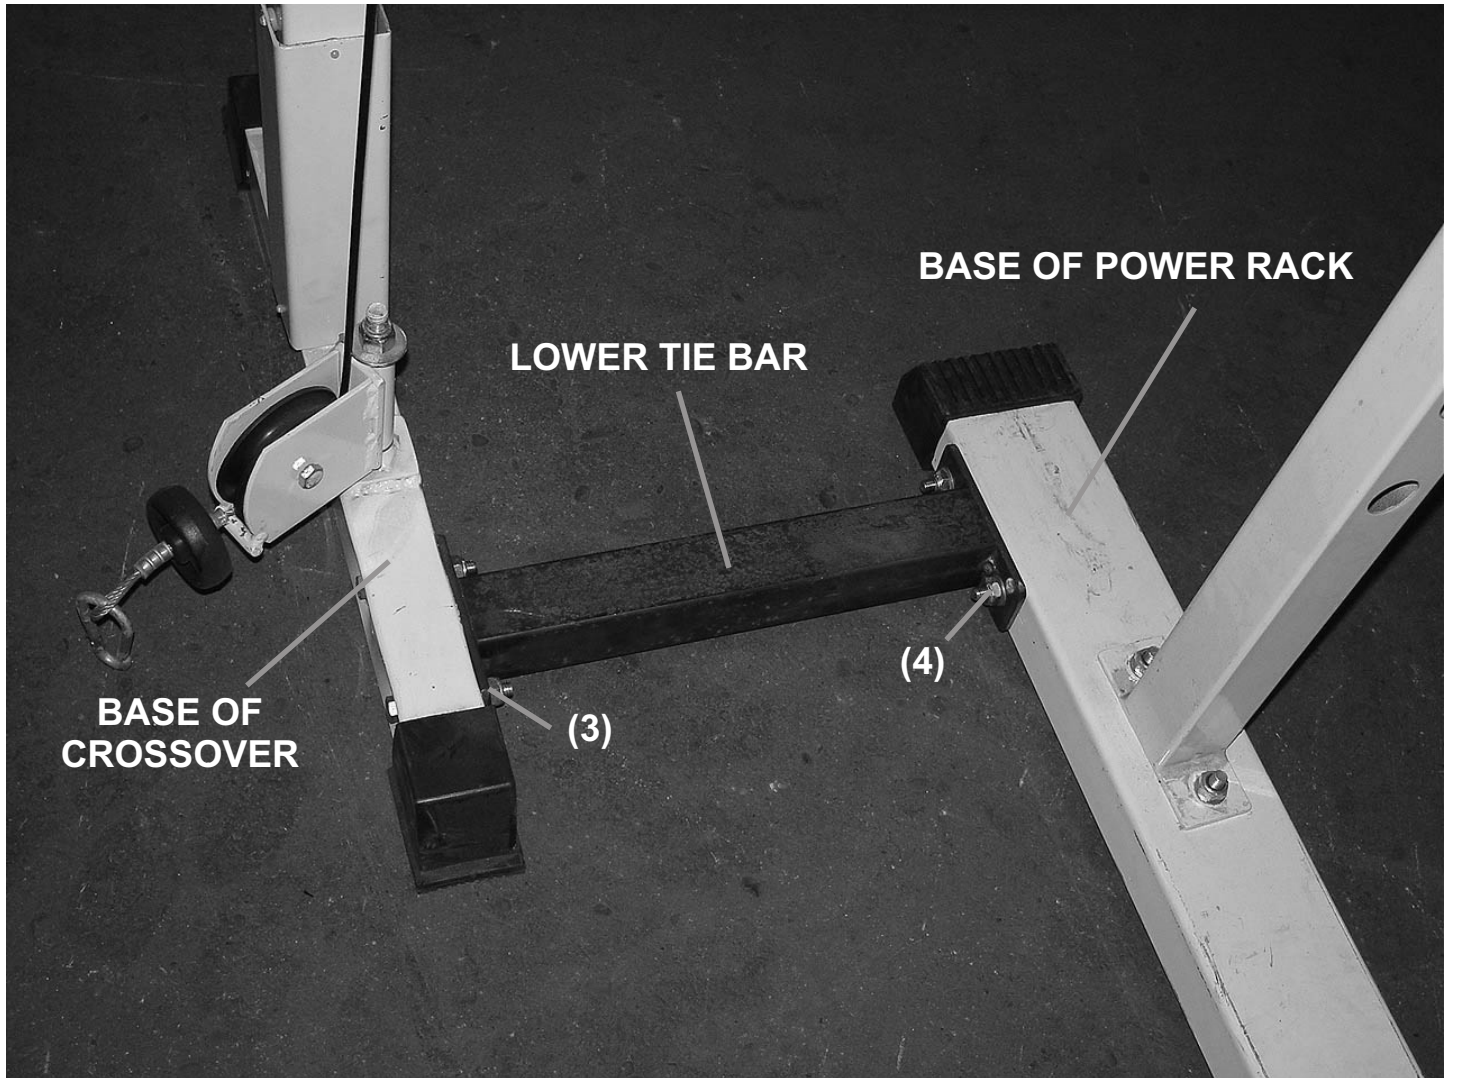

**C-92563-CO-KIT**  
**KIT TO ATTACH C-2610-OS-W CROSSOVER ATTACHMENT TO C-92563-W POWER RACK**

**ASSEMBLY INSTRUCTIONS**

**BEFORE YOU BEGIN:** ASSEMBLE C-2610-OS-W CROSSOVER ATTACHMENT PER INSTRUCTIONS.

**NOTE:** HOLES MUST BE PRESENT IN FRONT OF BASE TO ATTACH THIS KIT.

**1) SEE DRAWING #1**

ATTACH LEFT HAND AND RIGHT HAND UPPER TIE BAR TO 2610 CROSS BEAM WITH (4) 3/8 X 3 BOLTS, (8) 3/8 FLAT WASHERS, AND (4) 3/8 LOCK NUTS.

**2)** ATTACH LEFT HAND AND RIGHT HAND UPPER TIE BAR TO FRONT POST ON POWER RACK WITH (4) 3/8 X 3 BOLTS, (8) 3/8 FLAT WASHERS, AND (4) 3/8 LOCK NUTS.

**3) SEE DRAWING #2**

ATTACH LOWER TIE BAR TO CROSSOVER BASE WITH (4) 3/8 X 3 BOLTS, (8) 3/8 FLAT WASHERS, AND (4) 3/8 LOCK NUTS.

**4)** ATTACH LOWER TIE BAR TO POWER RACK BASE WITH (4) 3/8 X 1 BOLTS. SET UNIT ON LEVEL SURFACE AND TIGHTEN HARDWARE.

**HARDWARE LIST**

(16) 3/8 X 3 BOLT

(32) 3/8 FLAT WASHER

(16) 3/8 LOCK NUT

**NOTE: ALL MEASUREMENTS ARE IN INCHES.**